




Bachmann Industries, Inc.  
1400 East Erie Avenue, Philadelphia, PA 19124 USA  
www.bachmanntrains.com  
Customer Service Telephone 800-356-3910

## SCALE GG-1 LOCOMOTIVE INSTRUCTIONS

Thank you for purchasing a Williams by Bachmann® locomotive. This locomotive has been manufactured to provide years of use and enjoyment. Please follow the simple instructions below.

This locomotive has been greased and tested before leaving the factory. Before operating, please lightly lubricate the points shown in the diagram below. Do not over-lubricate and take extra care to avoid getting lubricants on the wheel surfaces or traction tires.

Figure 1

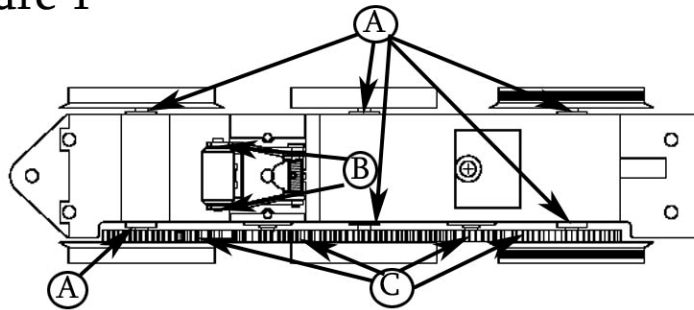

1. For the axles and coupler pivot points **Marked A**, we recommend that you lubricate with a small amount of light oil such as Bachmann E-Z Lube® #99984 Light Gear Oil. **Do not over-lubricate.**
2. For areas that require electrical flow, such as roller pick-ups **Marked B**, please use Bachmann E-Z Lube® #99981 Conductive Contact Lube. **Never use any Teflon® based oil on these areas because this type oil has insulating properties.**
3. For the gears **Marked C** we recommend that you lubricate with a small amount of heavy gear oil such as Bachmann E-Z Lube® #99983 Heavy Gear Oil. **Do not over-lubricate.**

### OPERATION

After unpacking the locomotive, make sure that the uncoupling plunger is in the correct position with the pin inserted in the knuckle. Failure to do so will allow the uncoupling plunger to contact the center rail and a direct short will occur when power is applied to the track. We recommend using an AC hobby transformer with maximum voltage output of 18 VAC and a wattage rating of **at least 90 watts**.

### Pantograph Installation

To install the pantographs, align the four pantograph insulators with the corresponding holes in the body shell and press the pantograph straight down onto the mounting stud. It should snap firmly in place.

### **Throttle Control**

The throttle control will allow you to operate your train at a wide range of speeds. Slowly turn the control knob until you are familiar with the response of the locomotive that you are operating. Please note that our sound systems require 6 volts or greater to operate correctly.

### **Horn Operation**

To operate the horn of your locomotive, simply depress the horn/whistle button on your transformer. Our True Blast™ Horns will play a 6 second sequence one time.

### **Bell Operation**

To operate the bell on your locomotive, press and hold the bell button for one second. To stop the bell, press and hold the button for one second.

### **Direction Control**

Williams reverse units sequence FORWARD, NEUTRAL, REVERSE, NEUTRAL, and again FORWARD. To sequence the reverse board, simply depress and hold the direction button, release the button 1 second after the train has come to a complete stop. **PLEASE NOTE:** If you do not wait for your train to come to a complete stop the reverse unit may not always sequence properly. After approximately 7 seconds without power, the reverse board will reset to FORWARD.

### **Uncoupling**

This locomotive is equipped with operating knuckle couplers at both ends. To uncouple, position the uncoupling plunger over the center of electro-magnetic track uncoupling section and activate the magnet.

## **PERIODIC MAINTENANCE**

### **Disassembly Instructions**

For periodic maintenance, you will have to remove the body shell and motor trucks to gain access to the parts that require servicing. The body shell is attached with six screws located on the underside of the frame. After removing the body shell, unscrew the Phillips head screw on the bottom of each truck. You will have to remove the pickup roller on one of the trucks to gain access to this screw. When removing the pickup roller assembly, take care to note the position of the insulators. You will be able to disengage the motor from the truck assembly after all screws have been removed. When servicing is complete re-attach the motor to the truck. Make sure the worm gear is meshing with the truck gear before tightening the mounting screw completely. You can test this by rotating the flywheel on top of the motor and the wheels on the truck will turn. Reattach the pickup roller assembly. Finally, re-attach the body shell using care not to over-tighten the screws.

### **Lubrication**

We recommend that you lubricate as directed on page 1 every 10 hours of operation. In addition, you also should check the motor gearbox every 25 hours. After gaining access to the gearbox as instructed above, you can inspect the gears and apply any necessary lubrication. We recommend Bachmann E-Z Lube® #99982 Grease, or equivalent.

### **Traction Tire Replacement**

Our traction tires are very durable and should not need replacing very frequently. They should last hundreds of hours under normal conditions. If they wear out prematurely, check to make sure your track joints are tight. Gaps in your track can cause damage to the tires. To replace the traction tires follow the disassembly instructions above. Next remove the two screws that attach each sideframe. Remove old tire if present, clean wheel groove with any degreasing agent **making sure to follow the safety and handling instructions on the degreasing agent's bottle.** Wipe dry with paper towel or clean rag. Stretch the new traction tire over the wheel making sure that it does not twist and seats smoothly in the wheel groove. Re-attach the sideframes and re-assemble as directed above.

### **Light Bulb Replacement**

This locomotive uses a 12 volt bayonet style bulb. The standard replacement bulb number is 53.



by BACHMANN

Bachmann Industries, Inc.

1400 East Erie Ave, Philadelphia, PA 19124 USA

www.bachmanntrains.com

Customer Service Telephone 800-356-3910

Part Number	Description	Number Used
<b>SCALE GG-1 BODY &amp; BODY PARTS</b>		
690-M001	Metal Frame	1
<i>I-30010DPA</i>	<i>Screw(Mounts Body to Frame)</i>	6
690-E002	Body Shell Complete	1
690-E006	Ornamental Horn & Bracket	2
690-02-06	Headlight lens	2
690-02-01	Door & Window Glass - Left	2
690-02-02	Door & Window Glass - Right	2
690-02-03	Windshield	2
309-01-02	Front Red Marker Lens	4
309-01-01	Side Red Marker Lens	4
690-E001	Pantograph	2
309-02-01	Pantograph Insulator	8
690-M010R1	Ladder	4
<b>TRUCK PARTS</b>		
690-E003	Powered Truck Assembly	2
690-M016R3	Flanged Wheel	4
690-M018R3	Flangless Wheel	4
690-M017R3	Flanged Wheel w/groove	4
344-X004R2	Traction Tire	4
690-M019R1	Axle	4
690-M039R1	Axle for Helical Gear	2
690-M005R5	Helical Gear	2
690-M015R2	Wheel Gear / Idler Gear	10
690-M014R1	Idler gear Pin	4
<i>I-30080DFM</i>	<i>Power Truck Mounting Screw</i>	2
690-E004	Lead Truck with Pilot & Coupler	2
690-03-01	Pilot	2
<i>6-Y207-2</i>	<i>Washer for Lead Truck</i>	2
<i>239-M015R1</i>	<i>Spring for Lead Truck</i>	2
<i>690-M009</i>	<i>Lead Truck Mounting Screw</i>	2
<i>690-M004R1</i>	<i>Spacer for Lead Truck Mounting Screw</i>	2
322-08-01	Top Insulator for Roller Pickup	2
322-08-02	Bottom Insulator for Roller Pickup	2
<i>I-26140DPM</i>	<i>Roller Pickup Mounting Screw</i>	2
322-E003	Roller Pickup Assembly	
690-04-04	Left Sideframe for Power Truck	2
690-04-03	Right Sideframe for Power Truck	2
<i>I-30060DPM</i>	<i>Sideframe / Bolster Mounting Screw</i>	20
<b>MOTOR PARTS</b>		
690-E005	Motor Assembly w/Motor Mount	2
<i>690-03-03</i>	<i>Motor Mount</i>	2
<i>322-M012R2</i>	<i>Grounding Plate</i>	2
<i>I-26060DPM</i>	<i>Motor Mount Screw-Large</i>	4
<i>I-26050DPM</i>	<i>Motor Mount Screw-Small</i>	2
<b>ELECTRONICS</b>		
<i>00247</i>	<i>Reverse Board (available from your dealer)</i>	1
<i>00245</i>	<i>True Blast II - Diesel Version (available from your dealer)</i>	1

See Diagram on opposite side for identification. Parts shown in Italics are not illustrated.



# Scale GG-1 Part Identification Chart

