

# Quick Start Guide

## For Bachmann E-Z App™-Equipped Locomotives



## Getting Started

### Introduction

Congratulations on the purchase of your Bachmann *E-Z App*™-equipped train. This will let you enjoy all the ease of touch-screen control through your smart device and the benefits of *Bluetooth*® 4 wireless technology.

### Downloading *E-Z App*™

Tap “App Store” on your *Bluetooth*® 4-supported Apple smart device and then search for “Bachmann *E-Z App*” to download the free Bachmann *E-Z App*™ to your smart device.

### Connecting to Your Train

Once you have downloaded the *E-Z App*™ to your smart device, you are ready to run your train. Be sure *Bluetooth*® is enabled on your smart device. Place your locomotive on the rails and power up the track. If your track is powered by a Bachmann DC Speed Controller/HO Transformer, turn the power all the way up. **If you are using a non-Bachmann power supply, please do not exceed 16 to 18 volts of power to the track.** If you are using a DCC system, the track is already powered and you can proceed to launching *E-Z App*™.

With the train on the powered track, launch *E-Z App*™ on your smart device. Within 3-10 seconds, your Bachmann *E-Z App*™ train will appear on your device screen. You can now operate your train by selecting it on the main screen. NOTE: At any time you can customize the train’s description by going to “Settings” (the Gear icon) on the Train Control screen.

## Running Your Train

After touching the name of your train, you will automatically navigate to the Train Control screen. On this screen you will see familiar touch controls that will allow you to control the train:

**Start Up/Shut Down** – Use this button to start up your train. When your train is running, this becomes a “shut down” button that powers your train off.

**Throttle** – Slide the throttle up and down to make your train go faster or slower.

**Loco Stop** – Push this button to stop your train. The lights and sounds will stay powered.

**Direction (Fwd/Rev)** – This button controls the direction of your train. ***Your train must be stopped to change directions.***

**Long Horn** – Plays a long horn sound.

**Short Horn** – Plays a short horn sound.

**Bell** – Plays a continuous bell sound. The bell sound will continue playing until you hit this button again.

**Light** – Turns headlight on and off.

**Stop All** – This will stop all the *E-Z App*<sup>™</sup>-equipped trains you are connected to on your layout.

Other buttons on the Train Control screen and additional functions are described in detail within *E-Z App*<sup>™</sup> and in the online User's Guide. Please check *E-Z App*<sup>™</sup> or visit <http://e-zaptraincontrol.com/user-guide/> for details.

Thank you for your purchase and welcome to *E-Z App*<sup>™</sup> touch-screen wireless control!

### Notice

The information in this document is subject to change without notice. To view the latest *E-Z App*<sup>™</sup> User Guide, including information about getting started, visit <http://e-zaptraincontrol.com/user-guide/>.

Bachmann Industries, Inc. shall not be liable for technical or editorial errors or admissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without the prior written consent of Bachmann Industries, Inc.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

Bachmann<sup>®</sup> and *E-Z App*<sup>™</sup> are registered trademarks of Bachmann Industries, Inc.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by *Bluetooth*<sup>®</sup> SIG, Inc. and any use of such marks by Bachmann Industries, Inc. is under license. iPad<sup>®</sup>, iPad Air<sup>®</sup>, iPad mini<sup>™</sup>, iPhone<sup>®</sup>, iPod touch<sup>®</sup> and Apple App Store<sup>sm</sup> are trademarks of Apple Inc.

