



- Installation of sound module(optional)
- 1.Remove the coal load from tender body.
 - 2.Direct install the optional sound module on decoder board.
 - 3.Assembly the coal load on the tender body.